 


www.disto.com

User Manual:



IEC 60825-1:2014 $\lambda=635\text{nm}$ $P_{\text{av}}=0.95\text{mW}$ $t_p > 400\text{ps}$



SAP no. 962158B

Charging

 


➔ ON




➔ OFF

2 sec




2 sec

 

- 1 Status bar/Function name
- 2 Haircross for aiming
- 3 Main line (result)
- 4 Active function
- 5 Selection keys linked to the symbol above
- 6 ON/DIST
- 7 Clear/OFF
- 8 Navigation
- 9 Add
- 10 Reference
- 11 Functions/Settings screen
- 12 Zoom
- 13 Subtract
- 14 Equal/Confirm




Reference

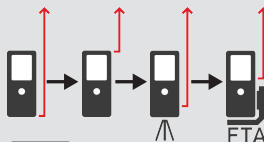

Quick Start

Leica DISTO™ D5

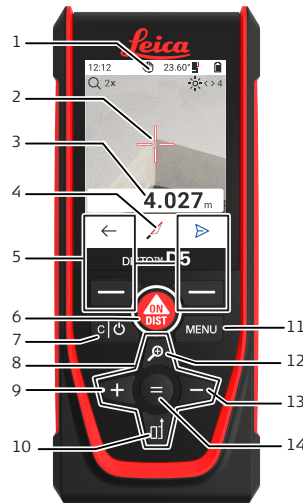

- when it has to be right

Leica
Geosystems



Kuker-Ranken
800-454-1310
www.KukerRanken.com

MENU

Functions



MENU

Settings




Pointfinder On/Off

Status Bar

MENU


→ 1 × click

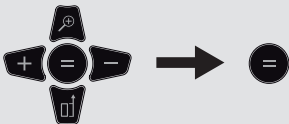

MENU

→ 2 × click

	Tilt units
	Distance units
	Screen rotation
	Beep
	Bluetooth
	Bluetooth settings
	Display illumination
	Favorites
	Keypad lock
	Tilt calibration
	Information/Serial number
	Distance offset
	Reset device
	Time
	Gesture control
	Language
	Shutdown time
	Pointfinder

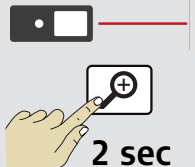

Zoom



→ 2 ×



→ 4 ×



→ 1 ×

12:22 5.30°

12:22	Time
	Gesture control
	Bluetooth® active
	Measuring reference
5.30°	Inclination
	Battery status
	Distance offset set

User Interactions



	Measuring indication
	Confirm
	Back
	Repeat
	Bluetooth® send
	Bluetooth® navigation On/Off
	Help
	Delete
	Use navigation, confirm with equal key
	Set back to 0 (Offset, Stake-out)

	Distance measurement
	Area
	Volume
	Triangle area
	Smart horizontal mode
	Level
	Pythagoras
	Stake-out
	Timer
	Height tracking
	Memory
	Slope
	Height profile